


## PACIFIC PARK BROOKLYN

### Truck Protocols

1. Trucks are required to use NYCDOT-designated truck routes for traveling to and from the construction site, which include primarily Atlantic Avenue, Flatbush Avenue, 4<sup>th</sup> Avenue and the Brooklyn-Queens Expressway, except as required for movement between the staging and construction areas;
2. Routing map to the site, along with DOT truck route map, is attached (the DOT truck route map can also be obtained from <http://www.nyc.gov/html/dot/html/motorist/trucks.shtml#routes>);
3. Trucks shall use the Pacific Street Queue Area or other designated location for truck marshalling and queuing to the extent practicable and appropriate;
4. Limiting on-site speed to five miles per hour;
5. Idling of vehicles and non-road engines for more than three minutes is prohibited per New York City law, except when operation of the engine is required to operate ancillary trucked-mounted equipment (e.g. , concrete trucks);
6. Covering all trucks carrying loose material such as debris, excavate or fill, and verifying that covers on all such trucks have been properly sealed. Outgoing trucks shall be inspected by the contractor at the gate, and not allowed to exit if covers are not properly sealed;
7. Washing the wheels of all trucks as they exit from the site;
8. Truck deliveries will be scheduled and untimely deliveries shall be turned away or reassigned with different delivery times;
9. Curbside deliveries shall occur within delineated closed-off area;
10. Designated onsite staging areas will be maintained throughout construction to store materials and accommodate construction vehicles that require early arrival and marshaling for immediate material delivery to high-demand construction areas.

**FAILURE TO COMPLY WITH THESE REQUIREMENTS WILL RESULT IN THE NON-COMPLIANT DRIVER, AND AND/OR FIRM, BEING DENIED ACCESS TO THE SITE FOR THE DURATION OF THE PROJECT**

Truck Route for B11 Project  
Ingress Map Via Vanderbilt (To Pacific Street Queue Area)

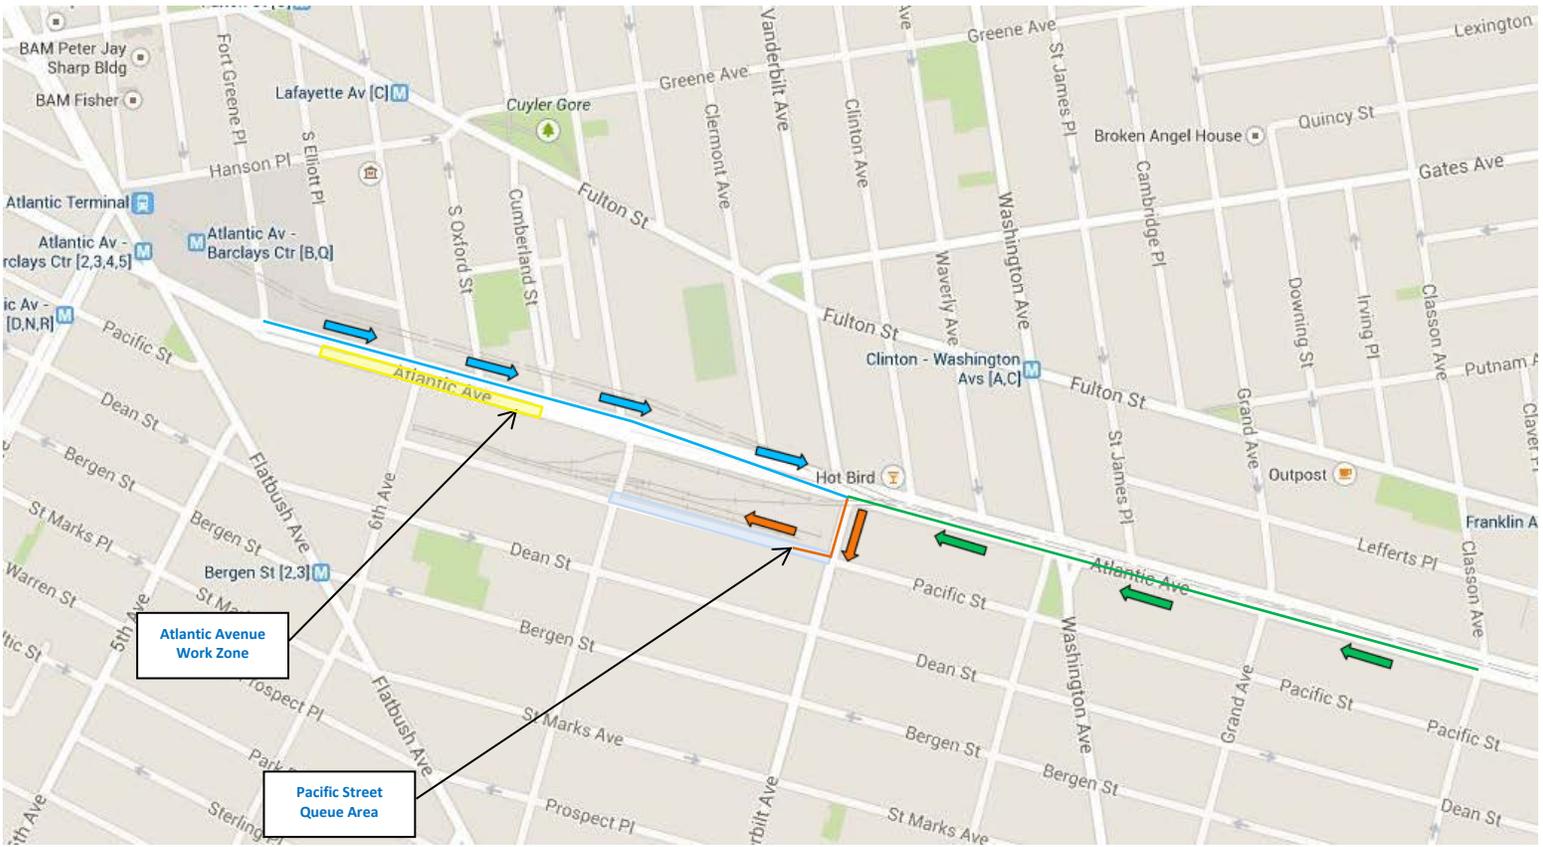

Option 1 - Traveling East on Atlantic Avenue

1. Travel east on Atlantic Avenue.
2. Turn right onto Vanderbilt Avenue.
3. Turn right onto Pacific Street and queue between Vanderbilt and Carlton Avenues.

Option 2 - Traveling West on Atlantic Avenue

1. Travel west on Atlantic Avenue.
2. Turn left onto Vanderbilt Avenue.
3. Turn right onto Pacific Street and queue between Vanderbilt and Carlton Avenues.


Legend

-  Common Ingress route
-  Ingress route from Atlantic Avenue (Heading East)
-  Ingress route from Atlantic Avenue (Heading West)
-  Ingress route to Pacific Street Queue Area

# 550 VANDERBILT, SITE B11 – INGRESS AND EGRESS ROUTES

## EXCAVATION / FOUNDATION PHASE

### ENTERING THE SITE

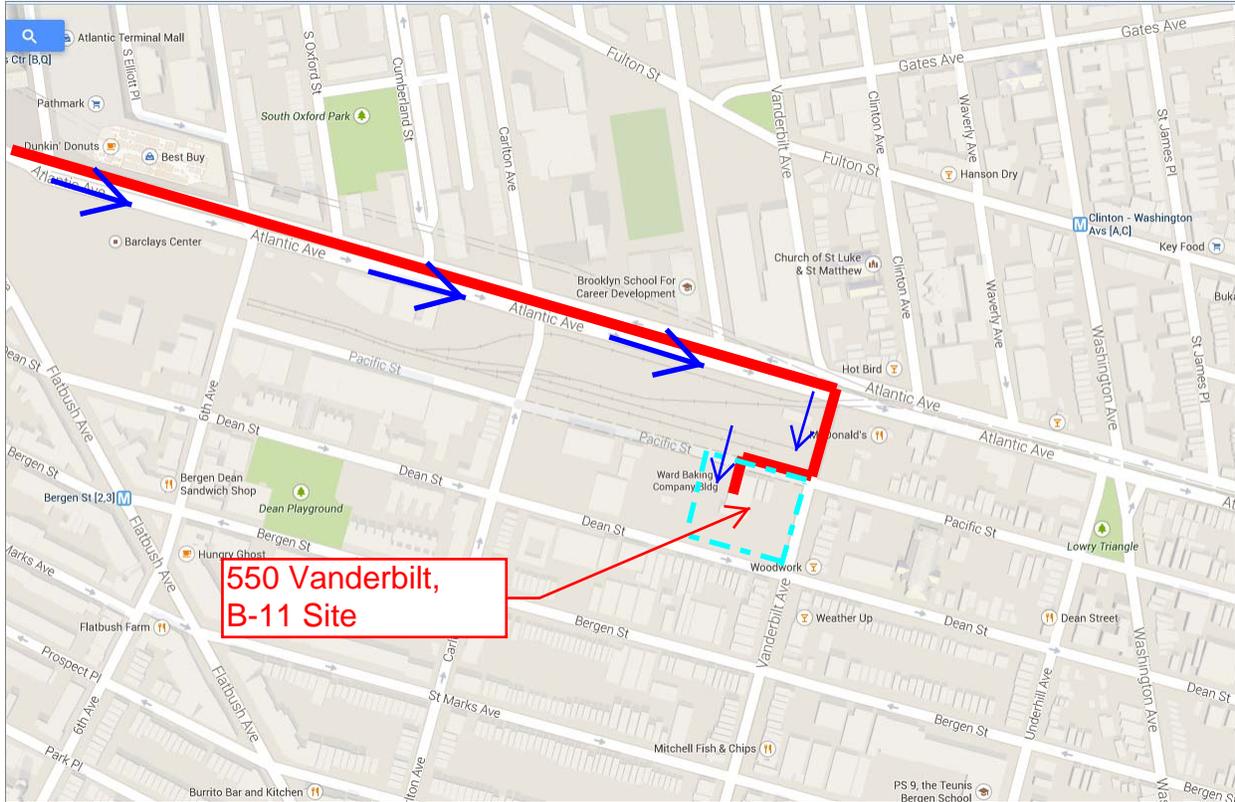


1. Exit the BQE at Atlantic Ave. Head East towards the Barclays Center.
2. Continue on Atlantic Avenue to Vanderbilt Ave.
3. Turn Right on Vanderbilt Ave.
4. Turn into construction entrance on right hand side (demapped Pacific Street) into construction area.
5. Turn left into B11/B12 with assistance of foundation contractor (Civetta Cousins Joint Venture.).

# 550 VANDERBILT, SITE B11 – INGRESS AND EGRESS ROUTES


## EXCAVATION / FOUNDATION PHASE

### EXITING THE SITE

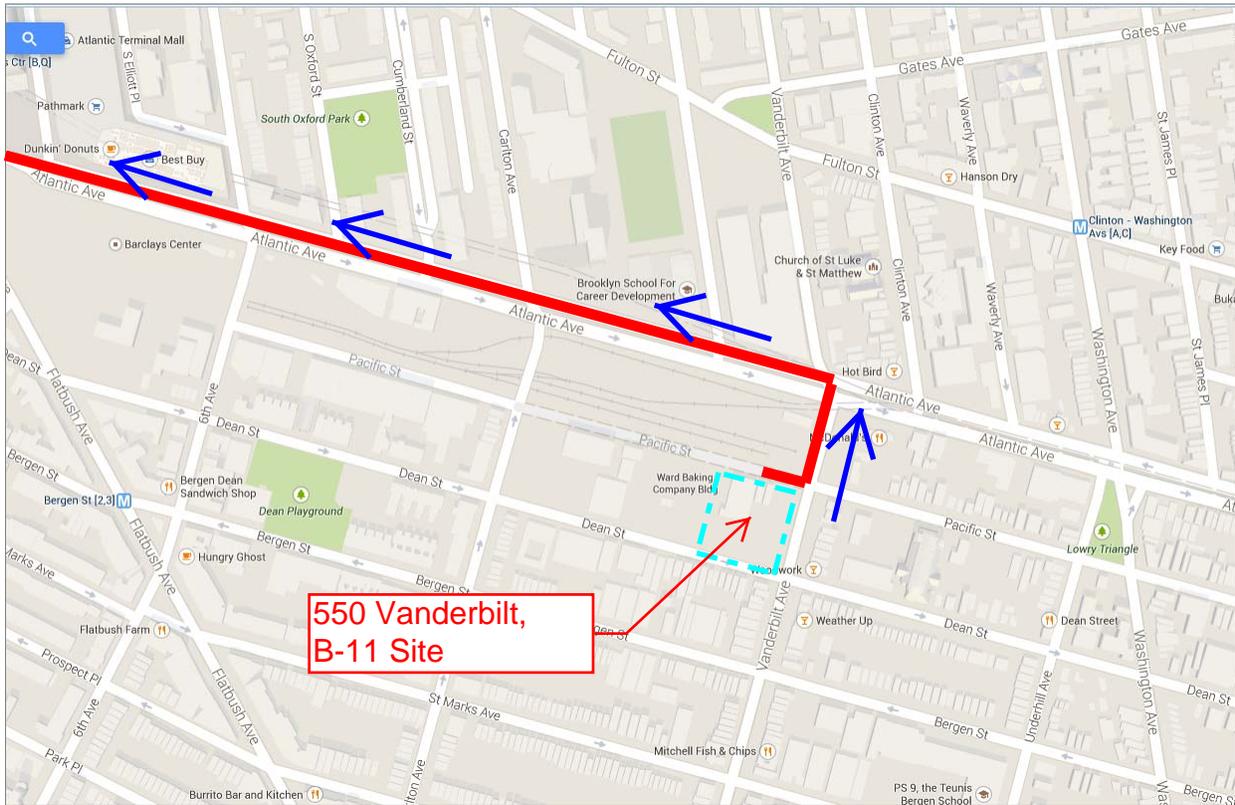

1. Exit B11/B12 turning right with assistance of foundation contractor (Civetta Cousins Joint Venture.) onto demapped Pacific St..
2. Turn Left on to Vanderbilt Ave.
3. Continue to Atlantic Avenue. Turn Left on to Atlantic Ave.
4. Head West towards the BQE.

Truck Route for B11 Project  
Ingress Map Via Vanderbilt (To NE Gate)

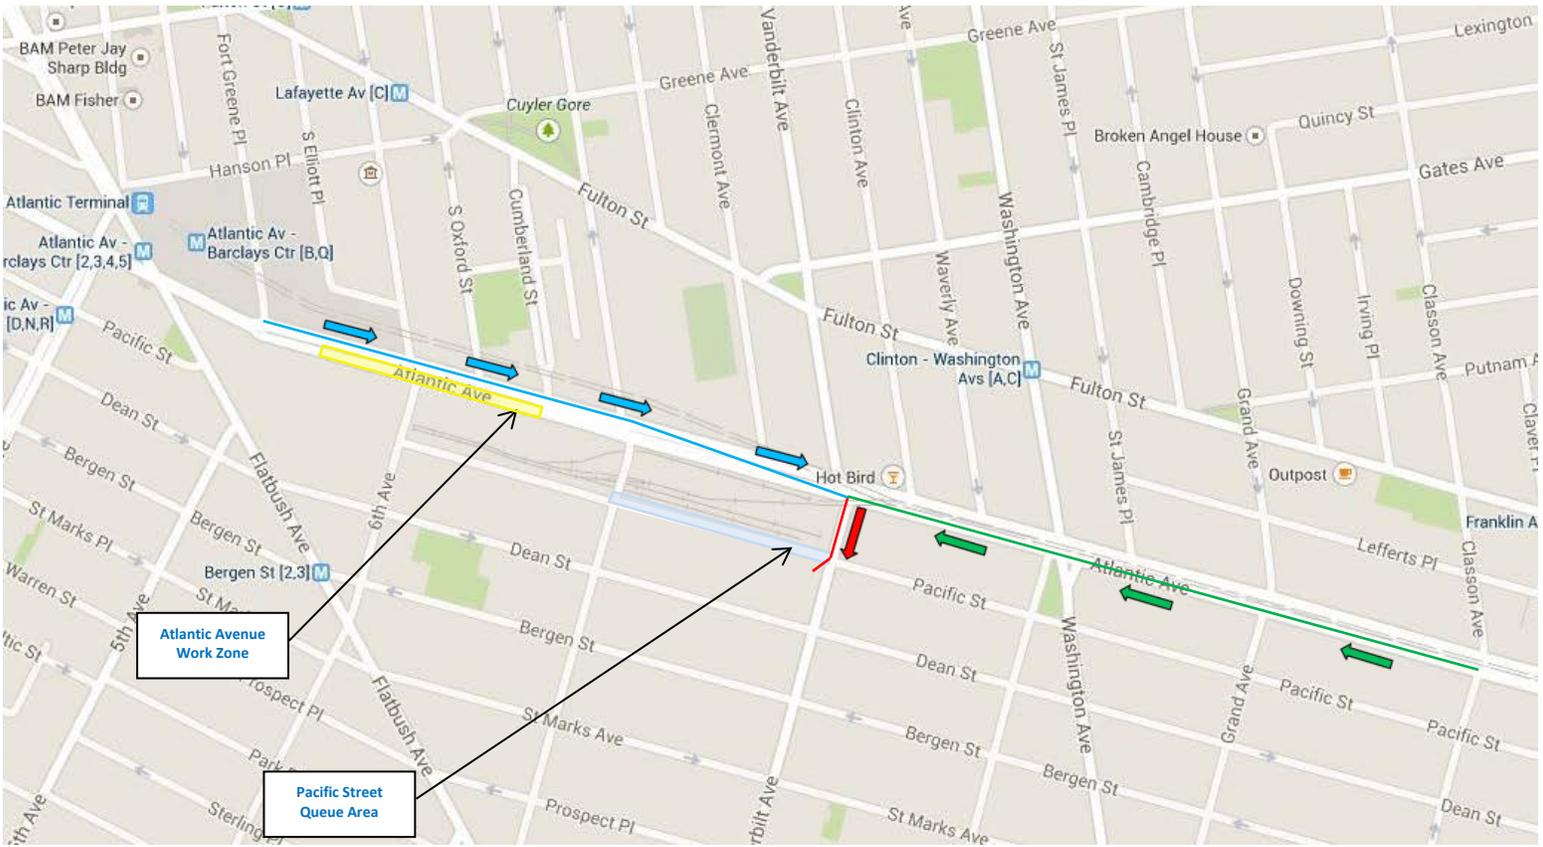

Option 1 - Traveling East on Atlantic Avenue

1. Travel east on Atlantic Avenue.
2. Turn right onto Vanderbilt Avenue.
3. Turn right into NE Gate.


Option 2 - Traveling West on Atlantic Avenue

1. Travel west on Atlantic Avenue.
2. Turn left onto Vanderbilt Avenue.
3. Turn right into NE Gate.

Legend

-  Common Ingress route
-  Ingress route from Atlantic Avenue (Heading East)
-  Ingress route from Atlantic Avenue (Heading West)

Truck Route for B11 Project  
Egress Map Via Vanderbilt (From NE Gate)

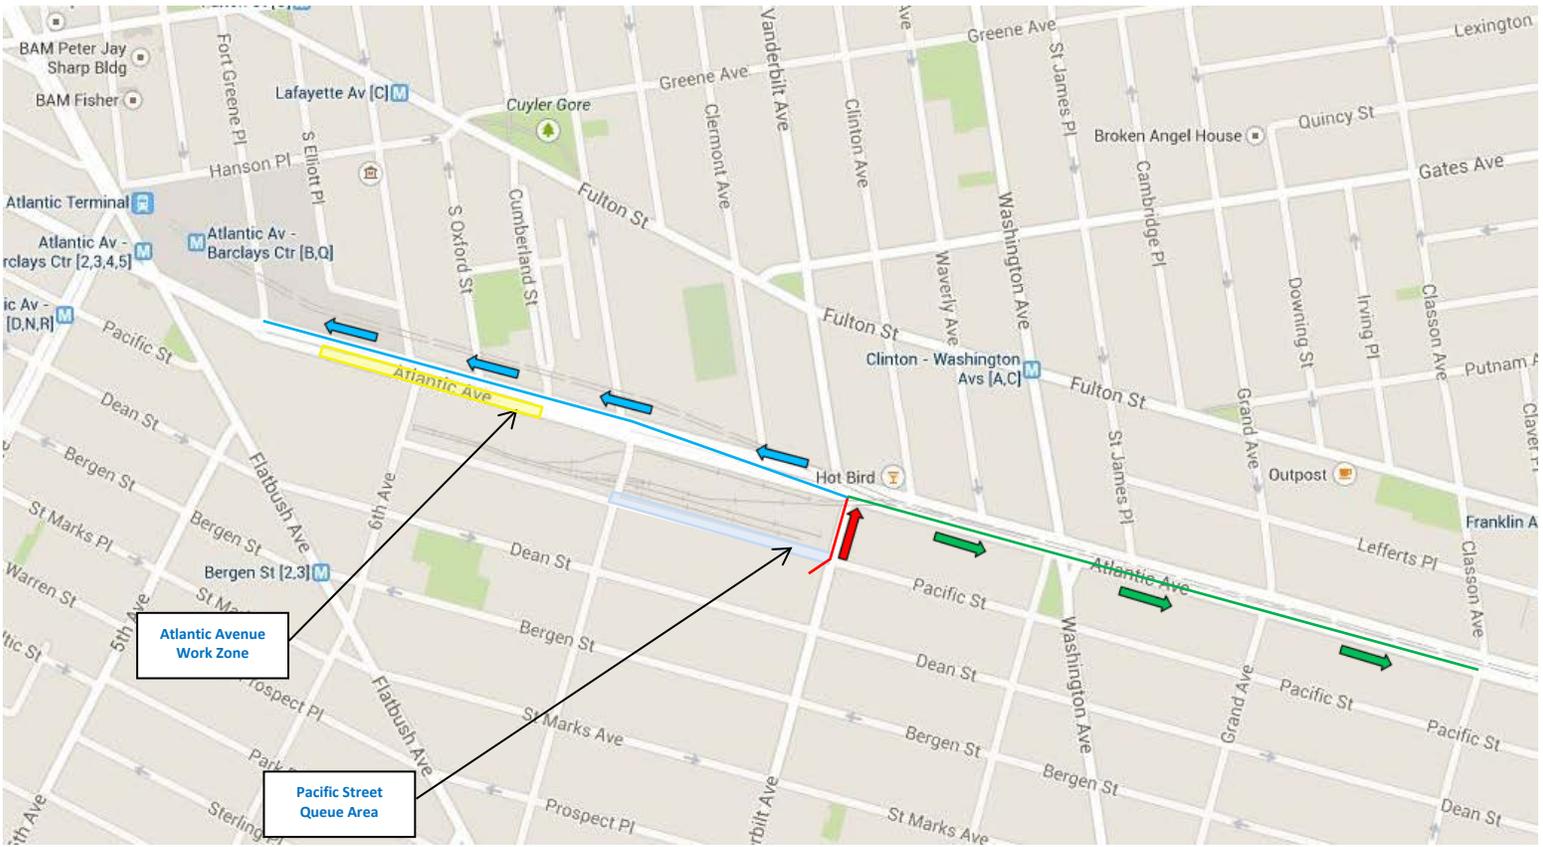

Option 1 - Traveling East on Atlantic Avenue

1. Exit through NE Gate
2. Turn left onto Vanderbilt.
3. Make right onto Atlantic Avenue


Option 2 - Traveling West on Atlantic Avenue

1. Exit through NE Gate
2. Turn left onto Vanderbilt.
3. Make left onto Atlantic Avenue

Legend

-  Common Egress route
-  Atlantic Avenue Egress route (Heading West)
-  Atlantic Avenue Egress route (Heading East)

Truck Route for B11 Project  
Ingress Map Via Vanderbilt (To SE Gate)

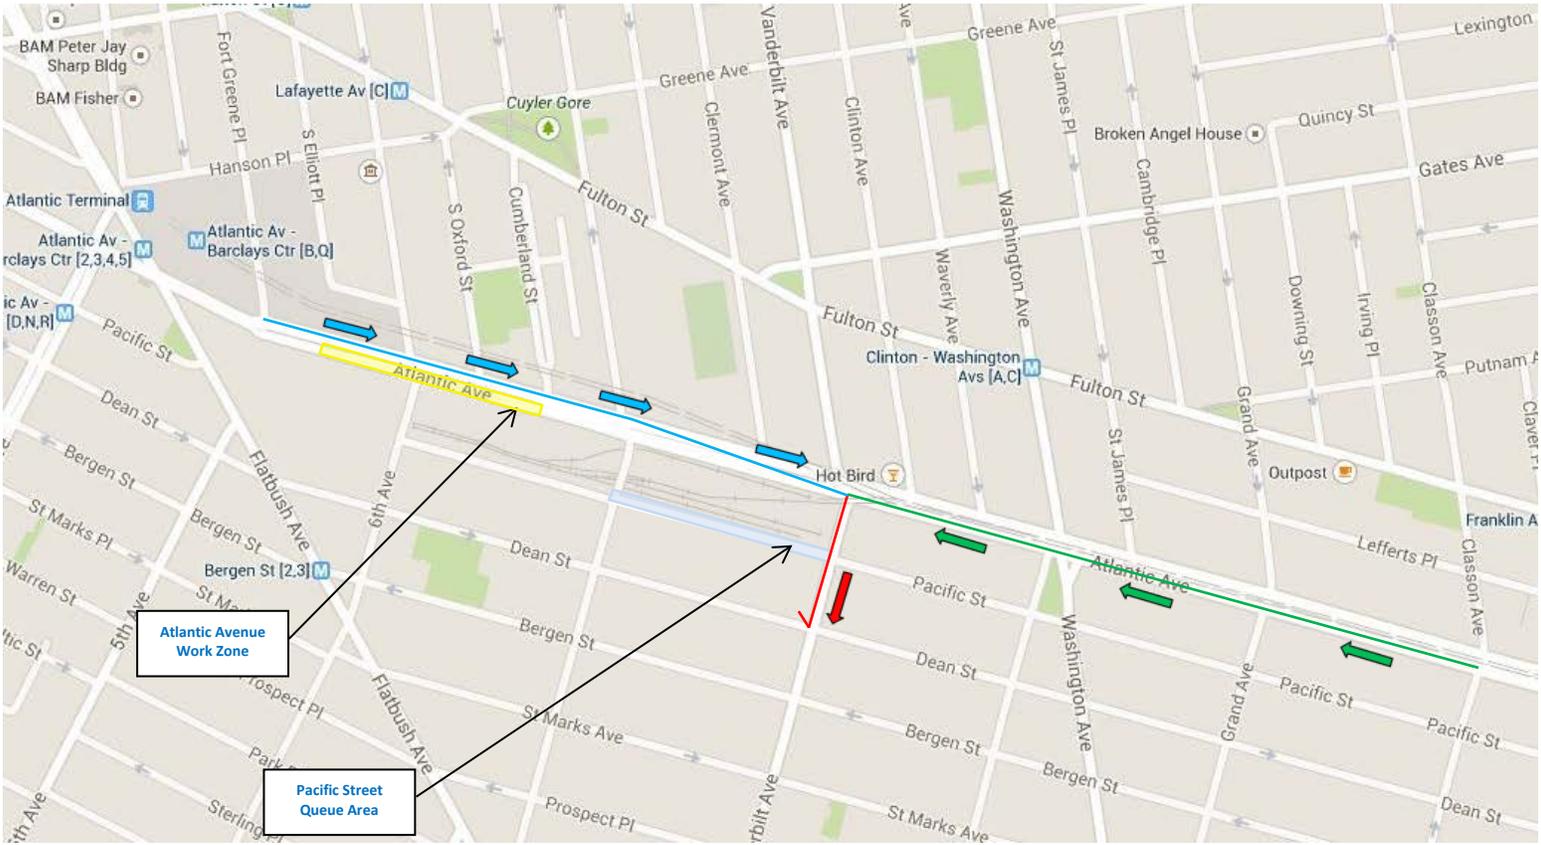

Option 1 - Traveling East on Atlantic Avenue

1. Travel east on Atlantic Avenue.
2. Turn right onto Vanderbilt Avenue.
3. Turn right into SE Gate.


Option 2 - Traveling West on Atlantic Avenue

1. Travel west on Atlantic Avenue.
2. Turn left onto Vanderbilt Avenue.
3. Turn right into SE Gate.

Legend

-  Common Ingress route
-  Ingress route from Atlantic Avenue (Heading East)
-  Ingress route from Atlantic Avenue (Heading West)

Truck Route for B11 Project  
Egress Map Via Vanderbilt (From SE Gate)

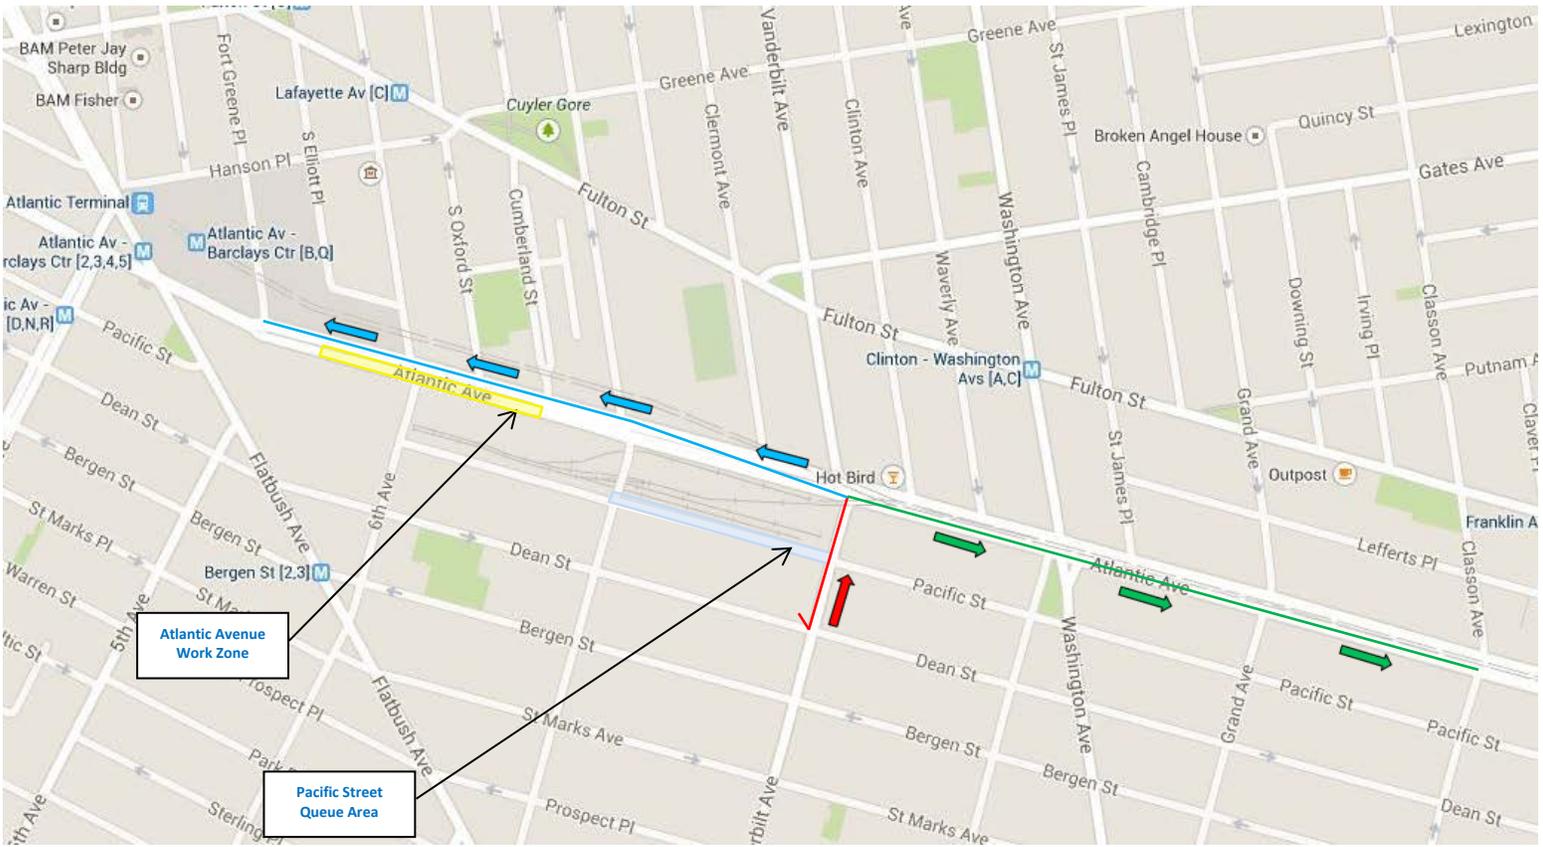

Option 1 - Traveling East on Atlantic Avenue

1. Exit through SE Gate
2. Turn left onto Vanderbilt.
3. Make right onto Atlantic Avenue

Option 2 - Traveling West on Atlantic Avenue

1. Exit through SE Gate
2. Turn left onto Vanderbilt.
3. Make left onto Atlantic Avenue

Legend

-  Common Egress route
-  Atlantic Avenue Egress route (Heading West)
-  Atlantic Avenue Egress route (Heading East)

**Key**

- Local Truck Routes
- Through Truck Routes
- Project Site Location

